



Enter code with these buttons

87-03 ACTIVATING OR CODING THE WIESBADEN RADIO

The factory code number, or the customer's personal code number, must be entered whenever:

- The radio is disconnected from the vehicle power supply.
- The battery cable is disconnected.
- The radio fuse blows.
- The battery goes dead.

Code Number possibilities are from 000 to 1999. The first position is always a 'blank' or a '1'.

Radios installed in the car at the factory are coded to 1111.

Radios that you get from your parts department are not coded.

Push and hold the AM/FM button, THEN push and hold the SCAN button to activate the sequence.



Enter code with these buttons

TO REACTIVATE RADIO AFTER RECONNECTING POWER:

- Obtain the code from customer. If radio is not properly coded after three tries, disconnect battery and/or remove and replace radio fuse in order to obtain three more tries at the code. If radio is not coded after six tries, radio will electronically lock up and must be replaced.

- Switch on radio/radio will not play.

Radio displays SAF_E on the display window.

- Push and hold AM/FM button, THEN push and hold SCAN button. Continue to hold AM/FM and SCAN buttons until the display changes to 1000 and then goes blank.

- After display goes blank, release the AM/FM and SCAN buttons.

- Now enter the code using the 1,2,3 and 4 selector buttons.

Example: "1987"

- push button number 1 once.
- push button number 2 nine times.
- push button number 3 eight times.
- push button number 4 seven times.

The code "1987" will appear on the display window.

- Once the code is entered, push and hold the AM/FM button. THEN push and hold the SCAN button.

Continue to hold AM/FM and SCAN buttons until the display changes to a radio station frequency.

- After radio station frequency appears, release the AM/FM and SCAN buttons.

- Radio should now play and is coded.

TO CHANGE THE CODE TO A NEW AND DIFFERENT CODE:

- Switch radio on. Radio should play and a radio station frequency should be on the display window.
- Push and hold AM/FM button, THEN push and hold SCAN button. The display will change to SAF_E. Continue to hold AM/FM and SCAN buttons until the display changes to 1000 and then goes blank.
- After display goes blank, release the AM/FM and SCAN buttons.
- Now enter the radio's old 'original' code by pressing the selector buttons 1, 2, 3 and 4. The code will be displayed.
- Once the code is entered, push and hold the AM/FM button, THEN push and hold the SCAN button. Continue to hold AM/FM and SCAN buttons until the display changes to COD_E and THEN changes to a radio station frequency.
- After radio station frequency appears, release the AM/FM and SCAN buttons.
- The radio should play, but it is not coded.
- To put in new code, leave the radio on.
- Push and hold the AM/FM button and THEN push and hold the SCAN button. Continue to hold AM/FM and SCAN buttons until the display changes to COD_E and then to 1000 before it goes blank.
- After display goes blank, release the AM/FM and SCAN buttons.
- Enter the 'new' code by pressing the selector buttons 1, 2, 3 and 4.
- The display window will show the new code.
- Now push and hold the AM/FM button, THEN push and hold the SCAN button. Continue to hold AM/FM and SCAN buttons until the display changes to SAF_E and then changes to a radio station frequency.
- After radio station frequency appears, release the AM/FM and SCAN buttons.
- Radio should now play and is coded.

CODING A NEW OR REMANUFACTURED RADIO AFTER INSTALLATION:

- Switch on radio. Radio should play and a radio station frequency should appear on the display window.
- Push and hold the AM/FM button and THEN push and hold the SCAN button. Continue to hold AM/FM and SCAN buttons until the display changes to COD_E and then to 1000 before it goes blank.
- After display goes blank, release the AM/FM and SCAN buttons.
- Now enter the code using the 1, 2, 3 and 4 selector buttons; the code will be displayed.
- Once the code is entered, push and hold the AM/FM button, THEN push and hold the SCAN button. Continue to hold AM/FM and SCAN buttons until the display changes to SAF_E and then changes to a radio station frequency.
- After radio station frequency appears, release the AM/FM and SCAN buttons.
- Radio should now play and is coded.

NOTE: For the latest specifications and procedures, always refer to the Microfiche system.